

## EXIT SWITCHES AND RADIO KEYFOBS



The switches shown opposite are both **manually** operated. The 'TOUCH FOR EXIT' switch is touch sensitive. The slightest contact of a finger or hand will activate the switch normally triggering the lock release to let callers in. This switch is suitable for persons with very little hand strength or co-ordination. These switches are normally use with hands free door entry systems or powered door openers.

The 'Exit PRESS' switch has to be pressed in to activate it. Its large button means that any part of the hand can be used to operate it.

All the units shown opposite are radio transmitters and work with a radio receiver. Radio is non-directional - so they don't have to be pointed in a certain direction unlike infra red devices eg. TV remotes. Also they are portable and can be used from any room in the house. Some are single button and can be used to operate a powered door opener or unlock a door. Others are two button. One of the buttons switches on the hands free system and the other unlocks the front door.



For More Information Please Contact

CDS Services, 26 Brookside Road, Ruddington, Nottingham NG11 6AW. Tel & Fax: 0115 984 5195

[www.cds-services.co.uk](http://www.cds-services.co.uk)